

HOW IT WORKS

01

STEP ONE

PLUG SPEAKER INTO THE RECEIVER.

02

STEP TWO

PRESS AND HOLD THE POWER BUTTON TO TURN THE RECEIVER ON. THE LED LIGHT WILL GLOW TO INDICATE IT IS ON.

03

STEP THREE

CHANGE THE CHANNEL BY PRESSING THE "CH" BUTTON WILL CHANGE COLOUR TO INDICATE THE CHANNEL. MAKE SURE IT IS RED.

04

STEP FOUR

USE "+" OR "-" TO ADJUST AUDIO INPUT VOLUME.

05

STEP FIVE

MAKE SURE THE RECEIVER IS NOT COVERED OR TOO CLOSE TO THE GROUND. THE HIGHER UP THE BETTER.

TROUBLESHOOTING

MOVE THE RECEIVER SLIGHTLY AROUND. THERE MIGHT BE A "DEADZONE" AT THE VERY LOCATION OF THE RECEIVER AT THE GIVEN MOMENT. HIGHER IS USUALLY BETTER. SOMETIMES THE UNIVERSE JUST DECIDED IT WANTS YOUR RECEIVER 10 CM TO THE LEFT.

ENSURE THERE IS NO INTERFERENCE CAUSED BY OTHER WIRELESS EQUIPMENT IN THE VICINITY.